


TRIM CARPENTRY · STAIRS

Shoe on a Skirt Board

Running base shoe along a stair skirt board to close the floor gap cleanly.

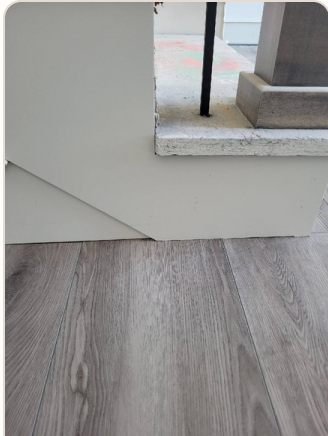

1 Start. The skirt board is set and a gap runs along the floor where it meets the LVP.



2 Cut & fit. Cut the base shoe to length and set it against the skirt, following the floor line.



3 Fasten. Nail the shoe into the skirt board - not the floor - so the floor can still move.



4 Finished. The shoe closes the gap in one clean, even reveal down the skirt.

WHY SHOE HERE

Base shoe hides the expansion gap between the stair skirt and the finish floor. Fasten it to the skirt so seasonal floor movement never opens a crack.